

The

VIEW-MASTER

FILM INSERTER

for

- Quick and easy mounting of film in your View-Master Personal Reels.
- Maximum protection of your film from fingerprinting and scratching.

IMPORTANT

Take the curl out of your film before cutting it.



The best way to straighten it is to loosely re-roll it against the curl then leave it for a few hours.

HOW TO USE THE VIEW-MASTER FILM INSERTER

1. Place Film Between the Blades

To avoid fingerprints, pick up film with the film Inserter.

Film should be emulsion (dull) side up. The short, square blade of the Film Inserter should

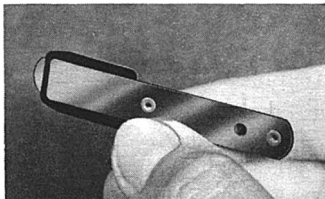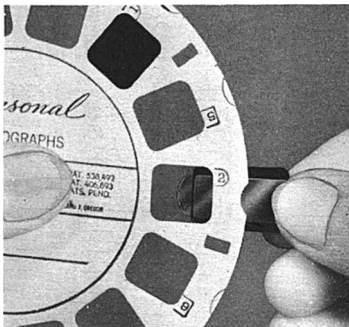

2 Insert Film and Both Blades Into the Reel Pocket.

The long blade will slip outside the inner edge of the pocket while the short blade will stop just short of the inner edge when the film is properly seated..

Then, withdraw the Film Inserter leaving the film in place.

IMPORTANT! Use Film Inserter to remove film from Reels. Slip Film Inserter into pocket, long blade under and short blade over the film. Press blades firmly together in the Reel window and withdraw film until it can be grasped from outside the reel.

To protect your irreplaceable stereo pairs, **ALWAYS** insert and remove film from your Personal Reels with the Film Inserter.

Sawyer's Inc.—Box 490—Portland, Oregon
Litho in U.S.A.