


# ILLUSTRATED PARTS MANUAL

for

# TALKING VIEW-MASTER VIEWER

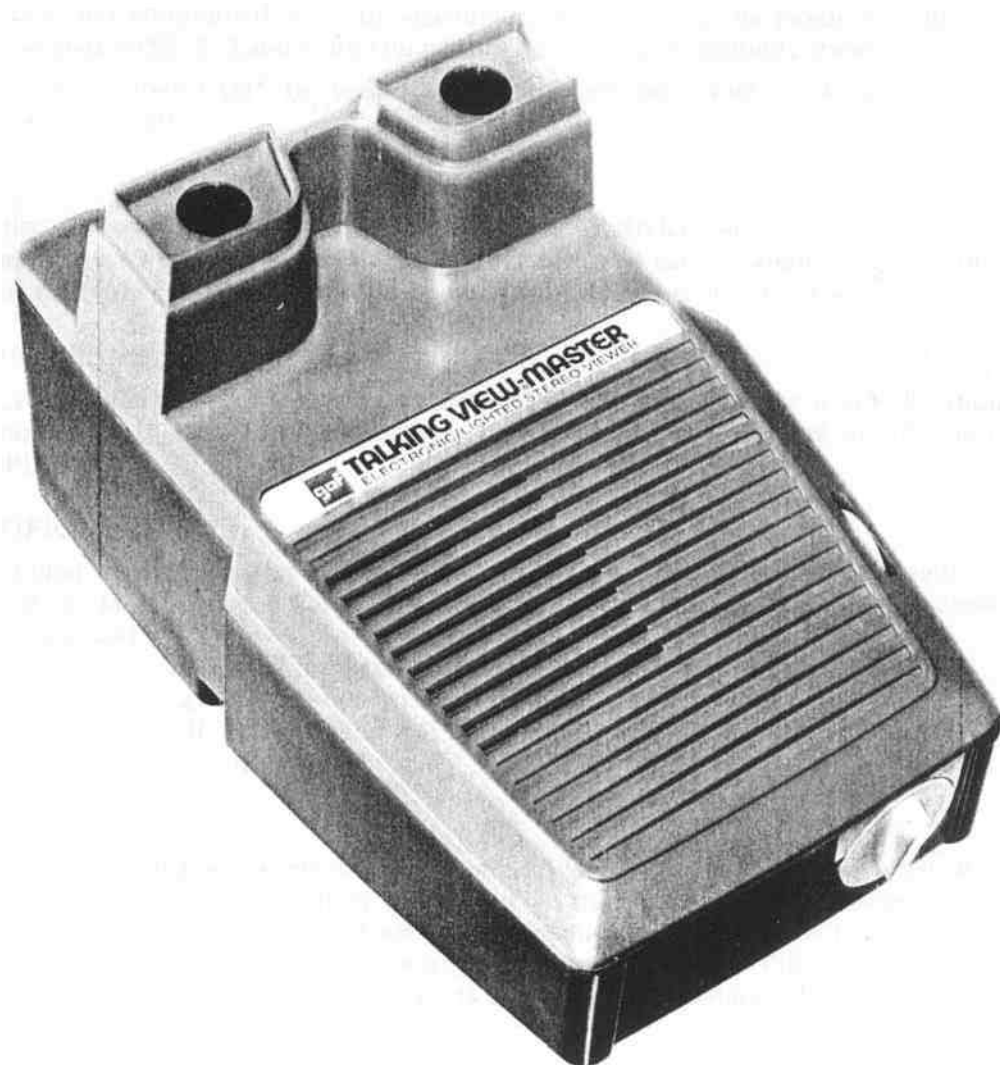

**GAF Corporation** | Portland  
**Consumer Photo Division** | Oregon



# HOW TO USE THE ILLUSTRATED PARTS MANUAL

## USING THE PARTS LIST

This parts manual includes all variable and common parts. Indented numbers in the parts list heading are used to indicate assemblies and component parts of assemblies. Number 1 is the major assembly. Part descriptions which are indicated under 2, 3 and 4 are components of the major assembly shown above.

If the part description has a symbol (a)\* be sure to read the footnote which will have important information affecting the specific part.

## PRICE LIST

The service parts price list is a separate book which contains prices of service parts for all parts Manuals. This price list is in numerical order by part number. The correct list price can be obtained by first finding the part number in any of the parts manuals and then locating the same number in the price list.

## SUPPLEMENTS AND REVISIONS

Supplementary pages may be added to this manual at later dates and must be filed in the proper location by page number, revision number and date. Changes on these pages will be noted by use of "R" and the revision number (EXAMPLE: R3).

## CODE NUMBER IDENTIFICATION

A 3/8" diameter white sticker in all projectors identifies each projector by a code number representing the week of manufacture (refer to Manufacturing Calendar.) The code number may also be used to determine warranty periods. Sticker locations:

- (1) 2 x 2 projectors – inside projector under the access cover.
- (2) 8MM projectors – on film path assembly under movement housing.
- (3) 447 series 2 x 2 projectors – inside cord storage compartment at the top.

## ORDERING PARTS


To order repair parts use the item numbers on the exploded views to locate the part in the parts list. Always order by part number and name, and order carefully in order to get the correct part for the model you are working on, assuring a match of color, parts and trim. (Please include projector code number for unit identification when ordering parts.) Order replacement parts from Consumer Photo Division, GAF Corporation, P.O. Box 490. Portland, Oregon 97207. All parts shipped f.o.b. Portland, Oregon.

# INDEX

TALKING VIEW-MASTER VIEWER (BROWN) .....	1
TALKING VIEW-MASTER VIEWER (RED, WHITE, BLUE) .....	2
TALKING VIEW-MASTER VIEWER (LIGHTED ELECTRONIC, BLUE) .....	3



# TALKING VIEW-MASTER VIEWER (BROWN)

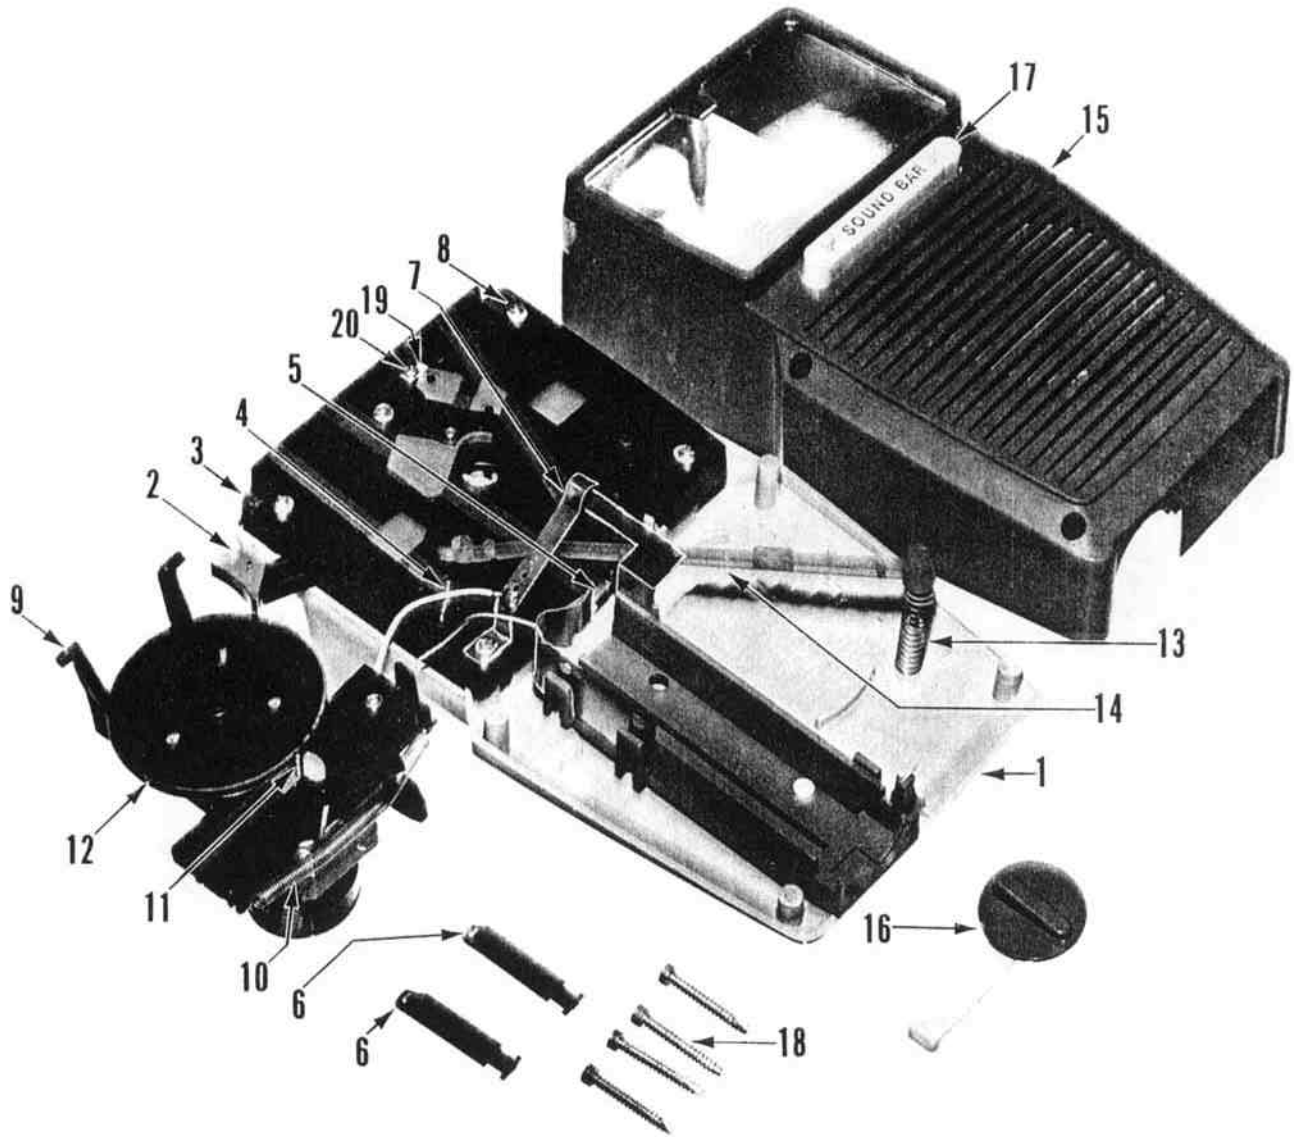


**KEY**  
**A – EARLY MODEL**  
**B – LATE MODEL**

Item	Part No.	Description	A	B
1	445-511	Housing Assy.-Front	X	X
	445-804	Nameplate	X	X
2	445-521	Lever Assy. - Reel	X	X
3	445-514	Plate-Intermediate	X	X
4	445-602	Spring-Compress	X	X
5	445-617	Spring-Advance	X	X
6	116-111	Spring-Reel Lock	X	X
7	445-104	Spring-Switch	X	X
8	501-234	Screw-6-20 x 5/8 Pan	X	X
9	445-519	Transmission Assy.	X	-
	445-566	Transmission Assy.	-	X
10	445-609	Spring-Tension	X	X

Item	Part No.	Description	A	B
11	445-615	Spring-Moter Shaft (Red)	X	X
	445-616	Spring-Moter Shaft (Green)	X	X
	445-611	Spring-Moter Shaft	X	X
12	445-808	Belt-Drive Wheel	X	X
13	445-601	Spring Compress	X	X
14	445-922	Tone Arm Assy.	X	X
15	445-512	Housing Assy.-Rear	X	X
16	445-547	Hatch Assy.-Captive	-	X
	445-516	Hatch Cover-Battery	X	-
17	445-531	Sound Bar	X	X
18	501-250	Screw-6-20x1	X	X
19	445-124	Stop	X	X
20	501-207	Screw-2-32 x 1/4	X	X
	445-805	Lanyard (Not Illus.)	X	-


## TALKING VIEW-MASTER VIEWER (RED, WHITE, BLUE)

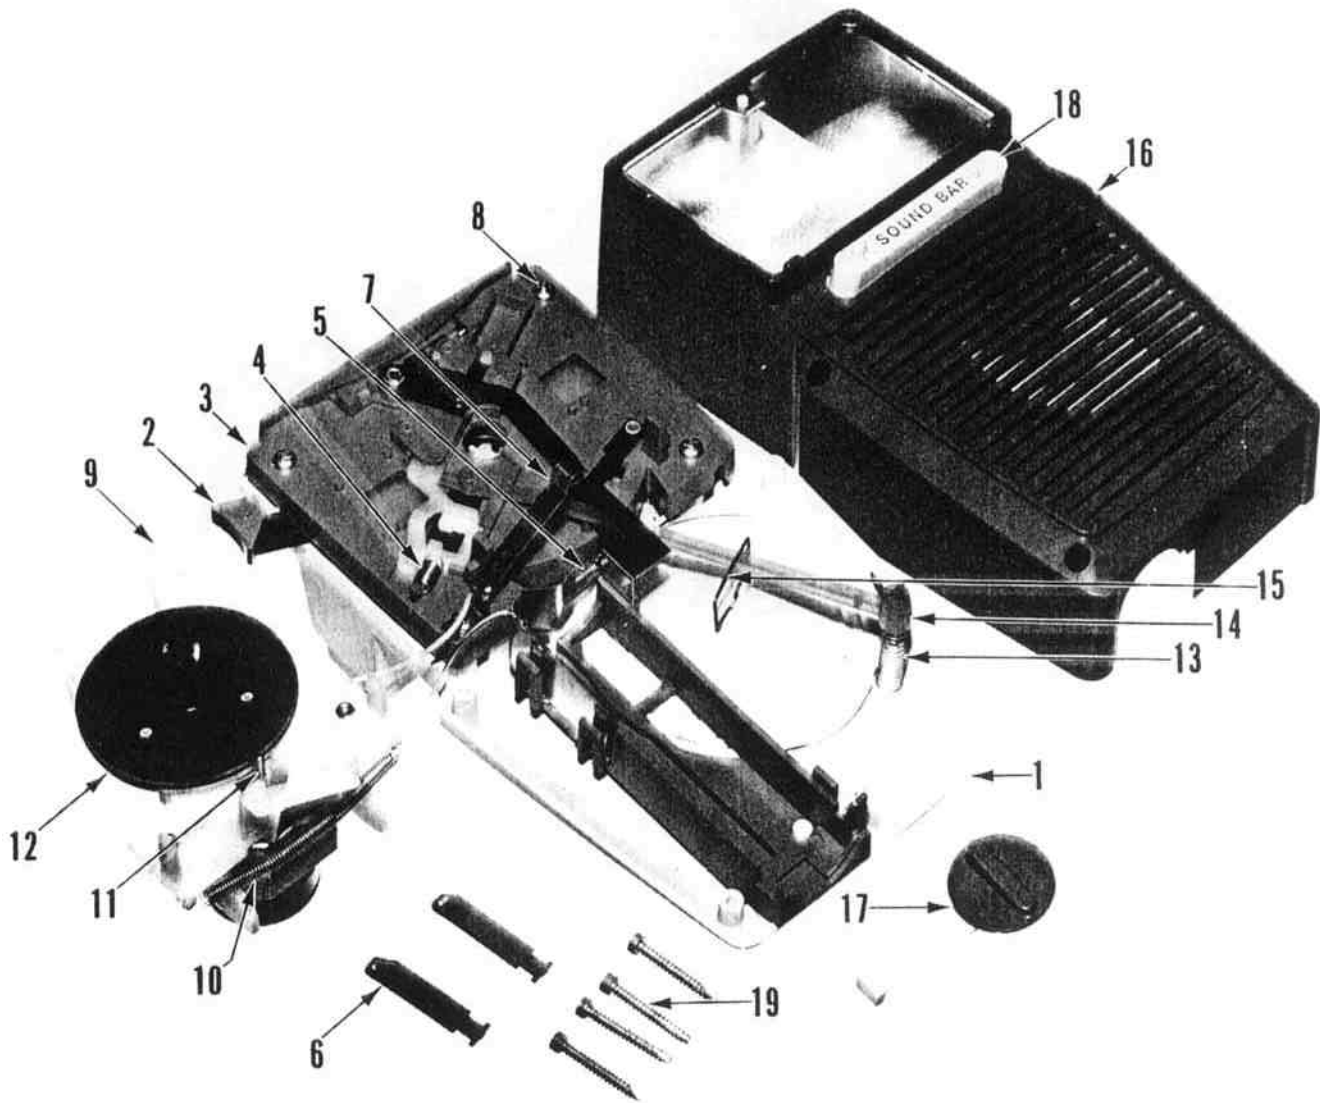

Item	Part No.	Description
		<b>1 2 3 4</b>
1	890-501	Housing Assy.-Front
	890-800	Nameplate
2	890-503	Lever Assy. - Reel
3	890-504	Plate Assy.-Intermediate
4	445-602	Spring-Compress
5	445-617	Spring-Advance
6	116-111	Spring-Reel Lock
7	445-104	Spring-Switch
8	501-234	Screw-6-20 x 5/8 Pan
9	890-505	Transmission Assy.
10	445-609	Spring-Tension

Item	Part No.	Description
		<b>1 2 3 4</b>
11	445-615	Spring-Moter Shaft (Red)
	445-616	Spring-Moter Shaft (Green)
	445-611	Spring-Moter Shaft
12	445-808	Belt-Drive Wheel
13	445-601	Spring Compress
14	445-922	Tone Arm Assy.
15	890-601	Fulcrum-Wire Form
16	890-508	Housing Assy.-Rear
	890-509	Hatch Assy.-Captive
17	445-542	Hatch Cover-Battery
18	445-531	Sound Bar
19	501-250	Screw-6-20x1

## TALKING VIEW-MASTER VIEWER (LIGHTED ELECTRONIC, BLUE)

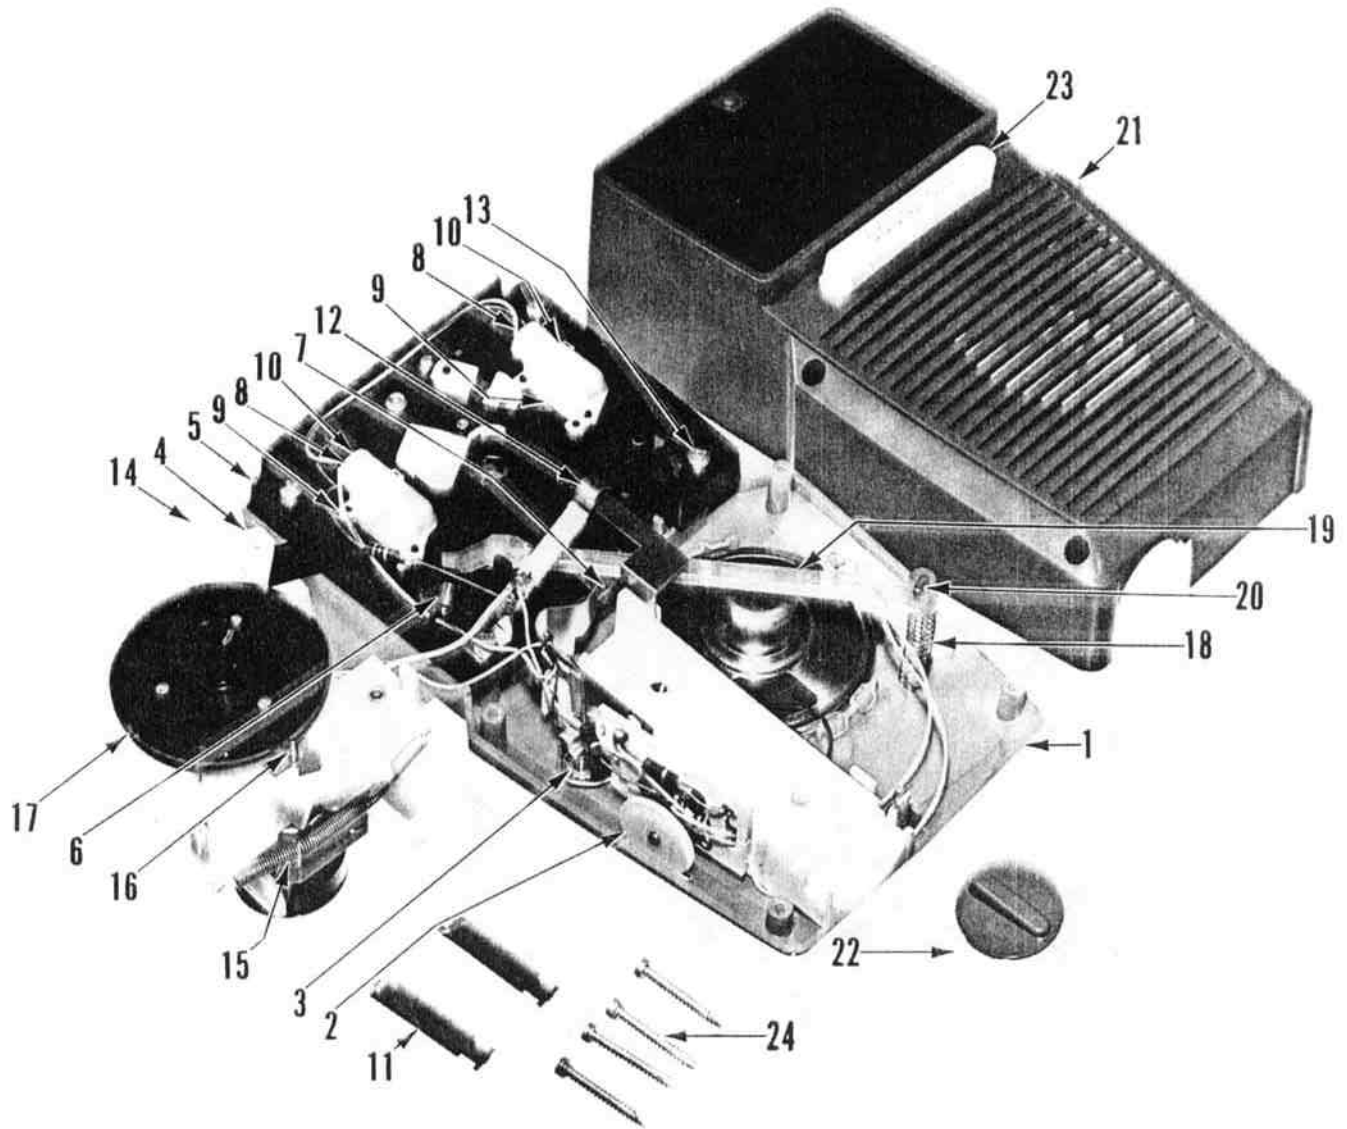

Item	Part No.	Description
1	445-529	Housing Assy.-Front
	445-854	Nameplate
2	445-843	Knob-Volume Control
3	45-855	Jack-Ear Phone (Early Models)
4	445-521	Lever Assy.-Reel
5	445-533	Plate Assy.-Intermediate
6	445-602	Spring-Compress
7	445-617	Spring-Advance
8	445-534	Lamp Assy.
9	445-129	Diffuser-Lamp
10	445-460	Housing-Lamp
11	166-111	Spring-Reel Lock
12	445-104	Spring-Switch
13	501-234	Screw-6-20 x 5/8 Pan

Item	Part No.	Description
14	445-573	Transmission Assy.
15	445-609	Spring-Tension
16	445-611	Spring-Motor Shaft
	445-615	Spring-Motor Shaft (Red)
	445-616	Spring-Motor Shaft (Green)
17	445-808	Belt-Drive Wheel
18	445-601	Spring-Compress
19	445-537	Tone Arm Assy.
20	445-209	Shaft-Tone Arm
21	445-538	Housing Assy.-Rear
22	445-541	Hatch Assy.-Captive
23	445-542	Sound Bar
24	501-250	Screw-6-20 x 1